



Installation Instruction

A310 Fill Valve + B206 Dual Flush Valve + C202 Dual Push Button+F406 Flush Pipe

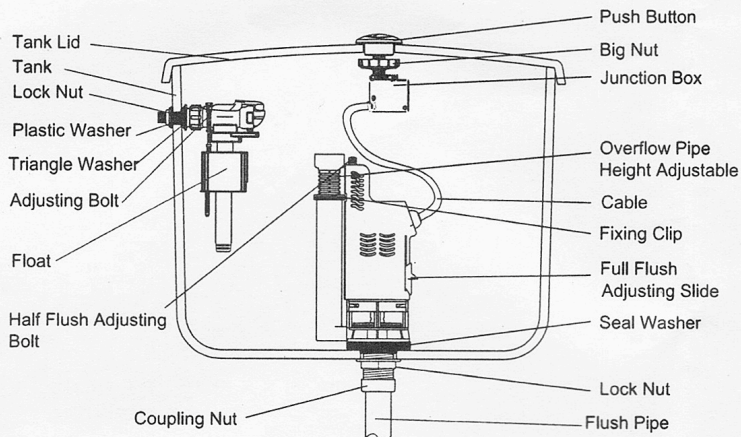


Diagram


Important: Before installation, please remove the old fittings and clean the tank. Please clean the water supply pipe first for newly installed one. Do not use plumber's putty to seal the fittings. Do not use chlorine(bleach) cleaners or related products.

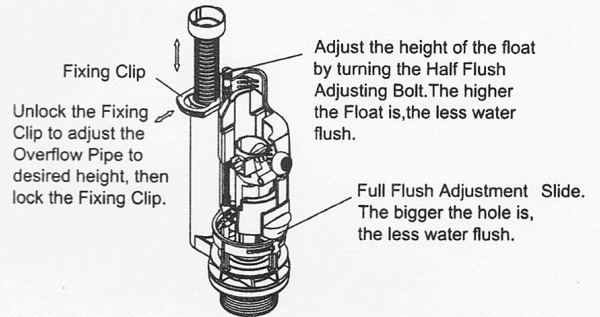


1. A310 Side Fill Valve

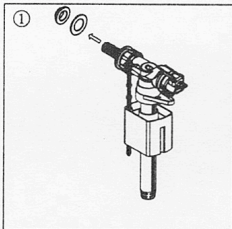

Disassemble the LOCK NUT and PLASTIC WASHER for valve installation.

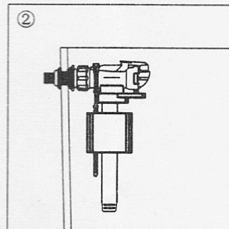


Position VALVE inside tank. Push the VALVE SHANK to the tank wall while attaching Washer and tightening LOCK NUT beyond hand tight.

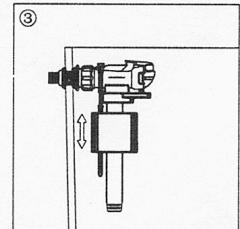


Turn on water supply. Adjust water to desired level by screwing the ADJUSTING BOLT and move the Float up or down along the Pipe .


2. B206 Dual Flush Valve

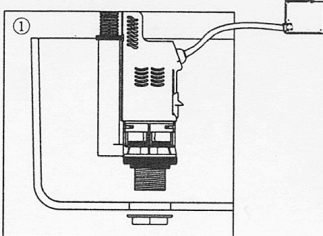

Disassemble Lock Nut for VALVE installation. Position the VALVE inside tank. Push down on the Valve Body and tightening Lock Nut.

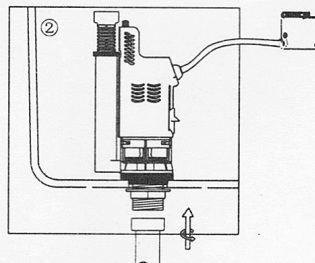


Then connect Flush Pipe by tightening the Coupling Nut.

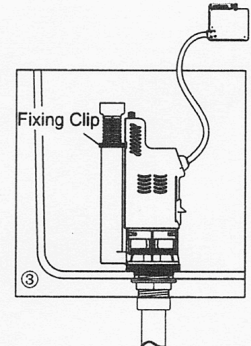


Unlock the Fixing Clip to adjust the Overflow Pipe to desired height, then lock the Fixing Clip.


3. C202 Dual Push Button

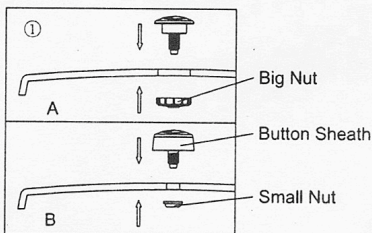

Turn the Nut and loosen it. Install the Button on the Tank Lid and fix the Nut properly.
Installation A for $\varnothing 4$ cm hole in the Tank Lid.
Installation B for $\varnothing 2$ - $\varnothing 3$ cm hole in the Tank Lid.

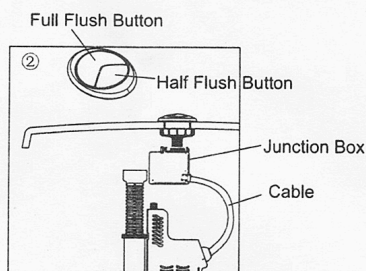

Make the Cable smooth, install the Button on the Junction Box, and then close the Tank Lid. Fill the Tank with water and push the Full&Half Button to check whether the flushing is normal or not.

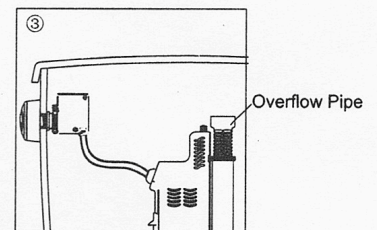

Installation for Front Push and Side Push is the same as Top Push.

Note: Subject to the product if any difference.